



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

NuVIEW Installation Instructions

Installation of Navitar/NuView Series 638 lens on Sony model VPL-PX35, PX40 & PX41 Projectors.

TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER

Disassembly:

1. Disconnect the unit from the power source and place projector with the bottom facing upwards. Remove one (1) screw from the rear-center of the projector. The projector cover will now slide forward with slight pressure. Remove cover and set aside for reinstallation.
2. Remove four (4) Phillips head screws securing prime-lens in place and remove prime-lens. Remove four (4) Phillips head screws securing prime-lens spacers in place and remove spacers.

Assembly:

1. Ensure that your Navitar lens and its adapter are separate. Using four (4) Phillips head screws removed in 2, above, install the adapter into the projector.
2. Replace the cover of the projector and single Phillips head screw removed in step 1 of the disassembly procedure above.
3. Insert the lens by gently twisting into the adapter. To focus, gently twist the lens. To zoom, loosen thumbscrew and twist knurled ring (zoom lenses only, of course). Re-tighten thumbscrew. CAUTION: Do not twist entire lens out of adapter!