

Selecting and entering device codes

Note:

- Two or more equipment codes cannot be entered for the same item of equipment.
- Equipment codes cannot be entered for "PJ".
- For device codes that have a power remote control signal, the power remote control signal for the device will be transmitted when the device code is selected. Turn the power for the device on as a test.


Setting method

1 Press [SETUP] for 3 seconds or more.



SETUP



2 Select the equipment that you would like to set, and then press [Enter].

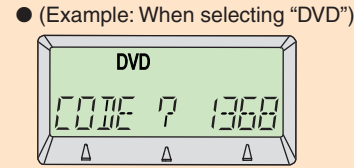

3 Select the desired equipment code while referring to "Equipment code list", and then press [ENTER].

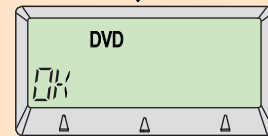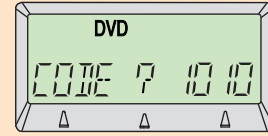

Note:

- If the home theatre system cannot be operated with the code you have entered, enter the next equipment code that is listed.
- If the home theatre system does not support this function, it will not operate when the buttons are pressed.
- Refer to the Remote Control Operating Guide for the remote control for details on other setting methods.

Equipment code list

Manufacturer name	Equipment code	Manufacturer name	Equipment code	Manufacturer name	Equipment code	
<DVD> DVD/DVD-R						
Panasonic	0490, 0503, 0703, 1010, 1011, 1362, 1462, 1490, 1762, 1834, 1905, 1908	Panasonic	0037, 0108, 0208, 0226, 0508, 0548, 0650, 0853, 1333, 1334, 1650	Panasonic	0247, 0500, 0701, 0847, 1508	
DENON	0490, 1634	Bang & Olufsen	0565	GE	0392	
GE	0522, 0717	GE	0093, 0178, 0560, 0625	HITACHI	0819, 1284	
HITACHI	0573, 0664, 0695, 0713	HITACHI	0037, 0108, 0178, 0480, 0481, 0508, 0548, 0578, 0634, 1037	JVC	0775, 1507	
JVC	0503, 0539, 0623, 0867, 1164, 1940	JVC	0093, 0508, 0606, 0650, 0653	Marantz	0200	
LG	0591, 0741, 0790, 0869	LG	0037, 0108, 0178, 0556, 0714	Pioneer	0329, 0352, 0853, 1308	
Marantz	0539	MITSUBISHI	0037, 0093, 0108, 0178, 0512, 0556, 1037	Pionnier	0853, 1017, 1108, 1142, 1243, 1244, 1293, 1458, 1570	
MITSUBISHI	0521, 0713, 1403	Philips	0037, 0108, 0178, 0512, 0556	SAMSUNG	0282, 0500, 0639, 0847, 0853, 1639	
ONKYO	0503, 0627	Pioneer	0037, 0170, 0486, 0512, 0760	SONY	0392, 0713, 0820, 0847, 0853, 1175, 1291, 1498	
Philips	0503, 0539, 0646, 0675, 1158, 1818	SAMSUNG	0037, 0093, 0178, 0208, 0226, 0370, 0556, 0587, 0618	Thomson	0853, 1639	
Pioneer	0490, 0525, 0571, 0631, 1965	SANYO	0108, 0170, 0208, 0370, 0508	TOSHIBA	0819, 1749	
SAMSUNG	0490, 0573, 1075, 1928	SHARP	0093, 0650, 1163, 1193	<AMP>/<RCV> Audio Amplifier/Receiver		
SANYO	0670, 0695, 0713	SHARP	0037, 0093, 0170, 0650, 1505, 1651	Panasonic	0309, 1288, 1308, 1316, 1518, 1548, 1633, 1763, 1764, 1765	
SHARP	0630, 0675, 0713, 0752, 1256, 2015, 2024	SONY	0093, 0650, 1163, 1193, 1505, 1651	Aiwa	0121, 1089	
SONY	0533, 0573, 0864, 1033, 1070, 1431, 1981, 2020	Thomson	0037, 0335, 0560, 0625	Bang & Olufsen	0799	
TOSHIBA	0503, 0695, 1045, 2006	TOSHIBA	0093, 0195, 0508, 0618, 0650, 0714, 1163, 1508	BOSE	1357, 1629	
YAMAHA	0490, 0539, 0545, 0646	Victor	0650, 0653	DENON	0121, 1104, 1360	
<VCR> VCR						
Panasonic	0226, 0616, 0836, 1244, 1515, 1516, 1562	Panasonic	0000, 0008, 0107, 0375, 1488	JVC	0074, 1495	
GE	0048, 0226, 0320	Fujitsu	1497	KENWOOD	0186, 0712, 1313	
HITACHI	0000, 0037, 0042, 0081	LG	0144	Marantz	0891, 1089, 1189, 1269, 1289	
JVC	0045, 0067, 0081	Motorola	0476, 1376, 1483	ONKYO	0135, 1298, 1320	
Kenwood	0067	NEC	1496	Philips	0891, 1089, 1189, 1269, 1289, 1673	
LG	0037, 0042, 0045	Pioneer	0144, 0533, 1500, 1877	Pioneer	0186, 1023, 1459, 1623, 1656	
MITSUBISHI	0000, 0043, 0048, 0067, 0081, 0642	Pioneer Scientific Atlanta	0008, 0237, 0477, 1877	SAMSUNG	1424	
Philips	0000, 0081, 0226, 0618, 0739	SONY	1006	SANYO	1801	
Pioneer	0042, 0067, 0081	TOSHIBA	0000	SHARP	0186, 1614	
SAMSUNG	0045, 0432, 0739				SONY	1112, 1158, 1441, 1622, 1658, 1722, 1759, 1822, 1858
SANYO	0048, 0067, 0104, 0348				Technics	0309, 1308, 1309, 1518, 1633, 1763, 1765
SHARP	0037, 0048				Victor	0074
SONY	0000, 0032, 0034, 0636, 1972				YAMAHA	0176, 0186, 0712, 1276, 1331
TOSHIBA	0042, 0043, 0045, 0067, 0081, 0352, 0432, 1503, 1972					
Victor	0067					

Names and functions of each part

* Buttons shown in this colour are buttons that can be used for learnt functions.

Projector power button
This turns the projector power on and off.

Liquid crystal display
The top shows the selected device, the bottom shows the functions of that device that can be operated.

Function buttons (A/B/C)
These operate the displayed functions for the selected equipment.

MUTE button
This mutes the sound.

Channel button
This selects the channel.

Projector button
This switches the remote control functions to projector mode.

MENU button
This switches to menu mode for the selected equipment.

▲▼▶◀ button
This moves the selection up or down or to the left or right.

NORMAL button
This returns setting values to their factory defaults.

PIC.MODE button
This switches to the image menu.

ASPECT button
This switches the aspect ratio.

MAIN adjustment button
This displays the "PICTURE" menu.

ADVANCED adjustment button
This displays the "ADVANCED" menu.

System power button
This turns the power supply for equipment other than the projector on and off.

LIGHT button
This turns on the backlight for the remote control.

SETUP button
This switches to setup mode for the selected system equipment.

SOURCE button
This selects the equipment to be operated.

VOLUME button
This adjusts the sound volume.

DVD/video playback buttons
These buttons are used for functions related to DVD and video playback.

RETURN button
When a menu is displayed, this button returns to the previous menu.

ENTER button
This button accepts the selected item.

SHUTTER button
This button lets you momentarily hide images.

Input select buttons
These buttons select the input signals from connected equipment.

MEM.LOAD button
This displays the "MEMORY LOAD" menu.

C.C.M. (Cinema Colour Management) button
This displays the "COLOUR MANAGEMENT" menu.

Learning home theatre system remote control signals


Note:

- Remote control signals that are not infrared-type (wave format) signals cannot be recorded.
- It may not be possible to record some types of signal.


Setting method

1 Press [SETUP] for 3 seconds or more.


SETUP

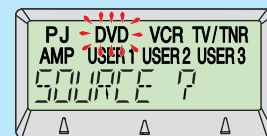



2 Select "USER 1-3" and then press [ENTER].

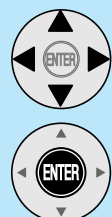

(Example: When selecting "USER1")

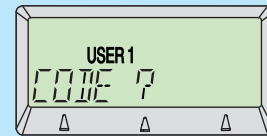


3 Select "LEARN?" and then press [ENTER].

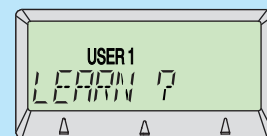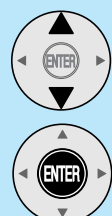

4 Place the projector's remote control next to the emitter of the home theatre system's remote control.



5 Press the button on the projector's remote control that you would like to learn, and after "LEARNING?" is displayed, press the corresponding button on the home theatre system device's remote control.

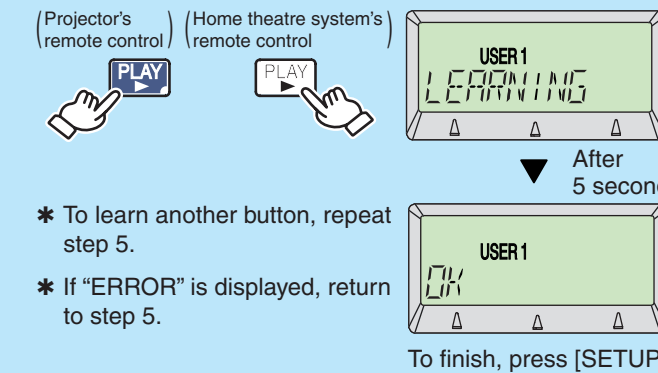

* To learn another button, repeat step 5.

* If "ERROR" is displayed, return to step 5.

To finish, press [SETUP].

SETUP

Note:

- If the batteries of the remote control are spent, the signals will not be recorded correctly.
- Each button must be recorded separately.

PT-AE900U/E LCD Projector Remote Control Quick Reference Guide

In addition to operating the projector, this remote control can also be used to make simple settings for your home theatre system.

Note:

- This remote control is only to be used for operating home theatre system. Do not use it for any other type of equipment.
- It may not be possible to record all home theatre system operations.
- Refer to the Remote Control Operating Guide for details on operation.

- Be sure to read the Operating Instructions for the projector and the home theatre system also when using the remote control.

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Operation

 
Operating the projector

To operate the projector, press the buttons for the desired operations.


Other operations

1 Press "Select".


SOURCE

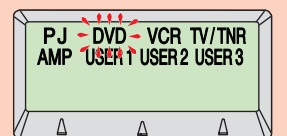

 2 Select the device to be operated and then press "ENTER".



(Example: When selecting "DVD")

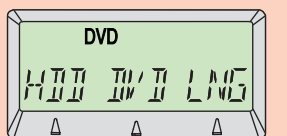 

3 Press the button to operate.

PLAY